

12. Exploded view and spare parts

The parts of the air heater are shown in an exploded view in figure 24. The table below describes each part and shows the correct article number for a replacement part.

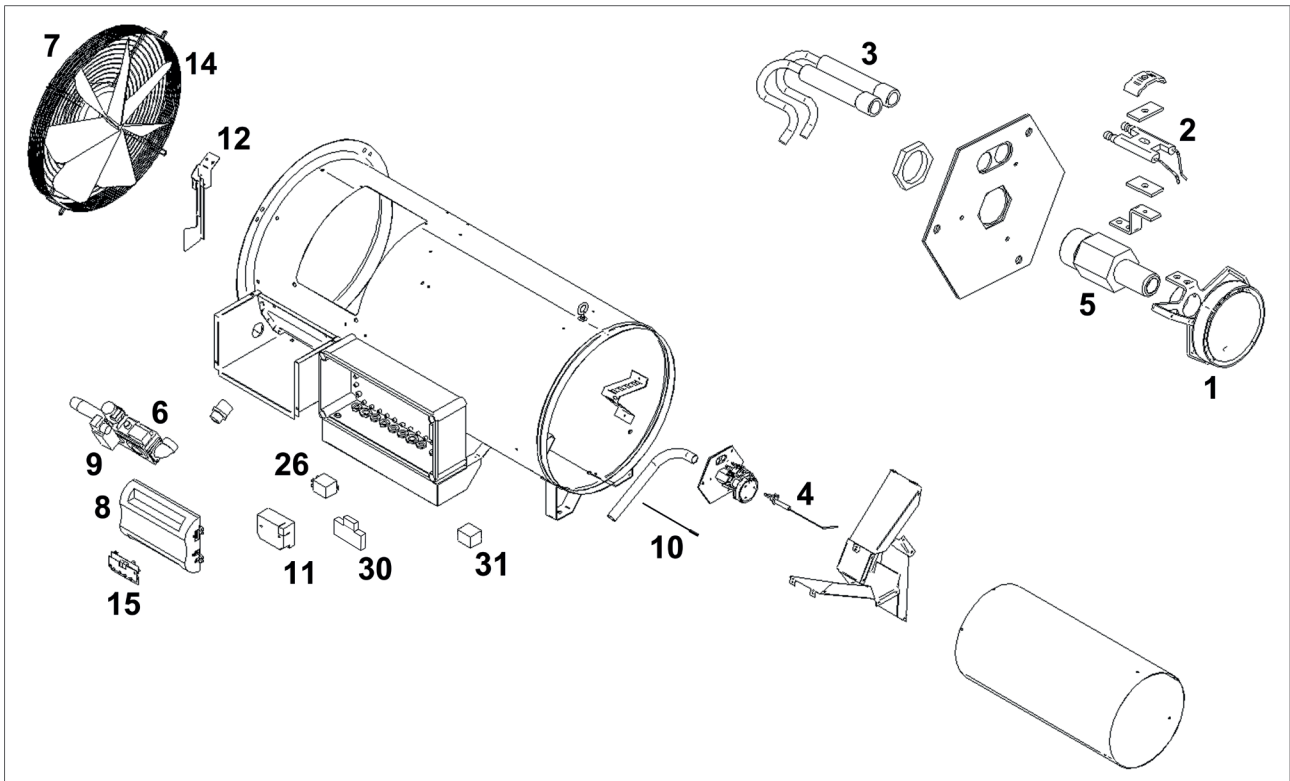


Figure 24 - Exploded view of the DHX

No.	Description	DHX40	DHX75	DHX100	DHX120
1	Flame stabilizer	GD3412	GD3412	GD3412	GD3412
2	Ignition electrode	GD200665	GD200665	GD200665	GD200665
3	Ignition cable	GD3400	GD3400	GD3400	GD3400
4	Ionisation electrode with cable	GD3393	GD3393	GD3393	GD3393
5a	Gas injector natural gas	GD3432	GD3433	GD3435	GD3437
5b	Gas injector propane	GD3422	GD3423	GD3425	GD3427
6	Gas valve	GD200713	GD200713	GD200713	GD200713
7	Fan motor	IP4213	IP4213	IP4227	IP4227
8	Burner control unit (EBM966)	GY5901	GY5901	GY5901	GY5901
9	Gas pressure switch	GD3930	GD3930	GD3930	GD3930
10	Temperature sensor (heat exchanger)	GY3933	GY3933	GY3933	GY3933
11	Ignition transformer	GD3404	GD3404	GD3404	GD3404
12	Vane switch	GD3405	GD3406	GD3410	GD3410
14	Fan blade	IP4215	IP4215	IP4228	IP4229
15	Display print	GY5902	GY5902	GY5902	GY5902
26	Motor relay	IK5200	IK5200	IK5200	IK5200
30	On/Off relay 230 V	IK5229	IK5229	IK5229	IK5229
31	Ionisation transformer	IK5102	IK5102	IK5102	IK5102